

MITSUBISHI LANCER EVO 2008 93C86

DASHBOARD PHOTO:



REQUIRED CABLE(s): C7



FOLLOW THIS INSTRUCTION STEP BY STEP:

1. Remove the dashboard and open it carefully.
2. Solder cables according to colors as shown on PHOTO 1.
3. Make sure that the connection you made is secure.
4. Press the READ EEP button and save the memory backup data.
5. Press the READ KM button and check if the value shown on the screen is correct.
6. Now you can use the CHANGE KM function.

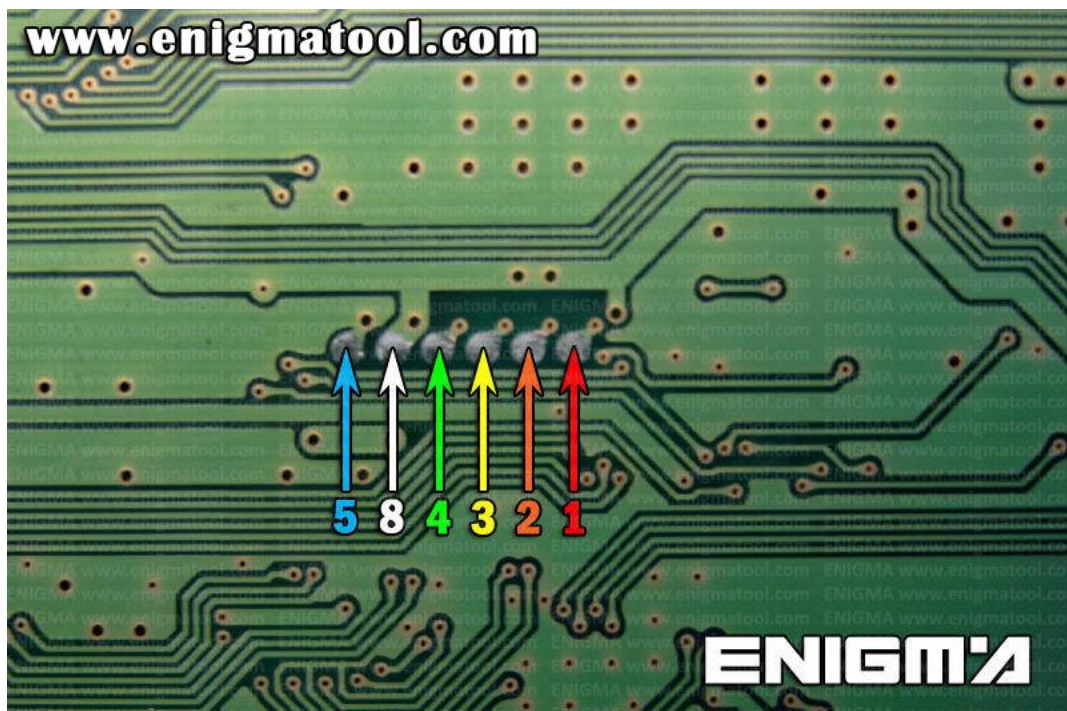


PHOTO 1: Connect cable C7 to the points as shown on the picture above.

