

ENIGMA USER MANUAL  
**VW NEW BEETLE MM NEC + 95320**

**DASHBOARD PHOTO:**




**REQUIRED CABLE(s):  
C1+C47**



**FOLLOW THIS INSTRUCTION STEP BY STEP:**

1. Please connect C1 cable to OBD2 connector in car.  
**! PLEASE CLICK ON READ EEP BUTTON TO SAVE ORIGINAL DATA COPY !**
2. Start THE BEETLE (2012-)DASH DIAG program.
3. Please click on READ KM button, check if the value shown on the screen is correct.
4. Click CHANGE KM button and introduce the NEW VALUE.  
**! DASHBOARD WILL GO TOTALLY BLACK !**
5. Please take out the dashboard from the car and open it VERY CAREFULLY.
6. As next step connect C47 connector on the back shown on PHOTO 1.
7. Please solder the **BLUE** wire to point shown on PHOTO 2.
8. Press the CHANGE KM button and introduce the NEW VALUE again.
9. After few seconds please check if the value shown on the screen is correct.

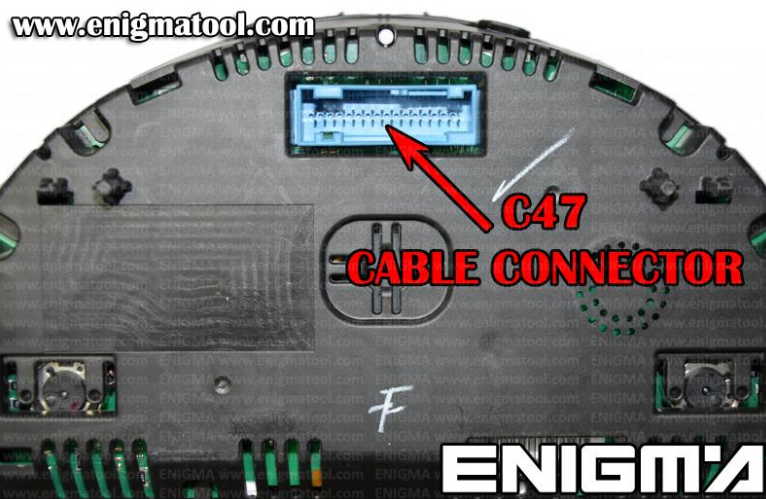


**PHOTO 1: After you open the dash please connect the C47 cable to connector on the back of dashboard.**



ENIGMA USER MANUAL  
**VW NEW BEETLE MM NEC + 95320**

[www.enigmatool.com](http://www.enigmatool.com)

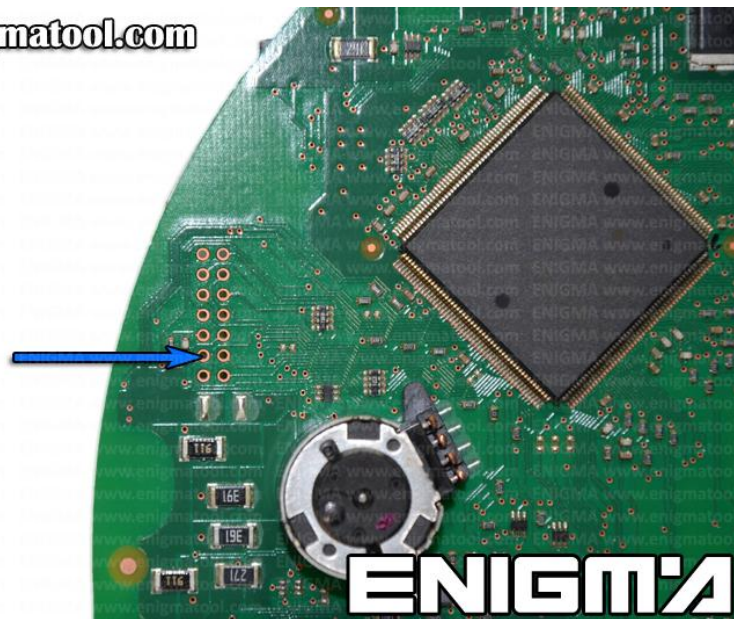

**PHOTO 2:** Solder C47 cable's BLUE wire to the point marked on the photo above.

